

# Extreme Cold HVAC Tips



## Drop Thermostat a Few Degrees

When the weather is cold, it is recommended that thermostat temperatures drop 3-5 degrees Fahrenheit from the usual temperature. This reduces strain on your furnace.

## Check & Replace Furnace Filters

When your furnace runs longer, you're drawing more debris and particles through your furnace filter. Check your furnace filter frequently to see if it should be replaced.



## Keep Exhaust Vents Clear

Understand how your furnace is vented to the outside of your house and make sure there is no snow or ice build-up preventing the exhaust from leaving the furnace.

## Furnace May Still Not Warm Properly

Depending on outdoor temperatures, it may not be possible to warm home to desired temperature. Please use space heaters as an absolute last resort due to safety issues and contact your HVAC professional with any concerns.

